

O&R TUNING TIP # 23

Published in the December 2010 Issue of the SAM 26
Newsletter, Bob Angel, Editor

Keeping the fixed point fixed. The question was: My fixed point frequently comes loose. How can I prevent this?

First, use hard (not squishy) insulating washers, such as the original ones supplied by O&R. If you're only using one nut to secure both the point and the wire lug, add a second nut with the lug captured between the two nuts. But before adding that lug and second nut, snug down the first nut with a drop of Loctite. Finally, use a plastic zip tie near to the timer to keep the point wire from vibrating.