


# MOUNTING A Z-BAR FREEWHEELER ON A PLASTIC PROP

As Published in the February 2009 issue of Scale Staffer, Gerald Sullivan, Editor

## Alternate Mounting of Tube & Z-Bar Free Wheeler on a Plastic Prop

File a groove across the hub and drill two small holes through the blades.


Bind the tube assembly to the hub. Use epoxy to secure tube and bindings.

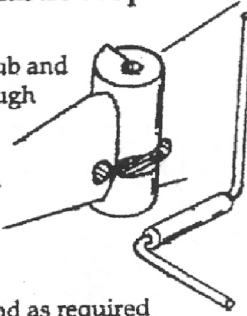

Bend as required to meet driver squarely.

Adjust other end to limit Z-Bar rotation to about 90 degrees.

Clip wires to length after all adjustments are made.

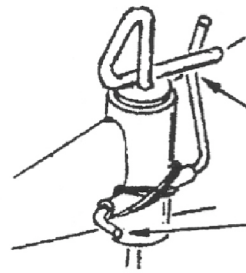

*From The Cloudbusters NL*