


MOTOR STICK (1/8 x 3/8 x 25 cm)




MOTOR HOOK (BENT PIN)



PROPELLER ASSEMBLY

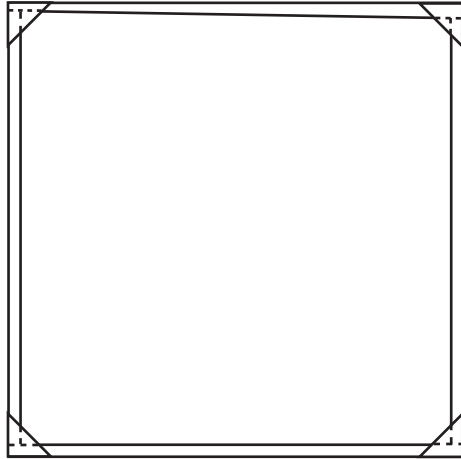

FIN AND TAIL BOOM

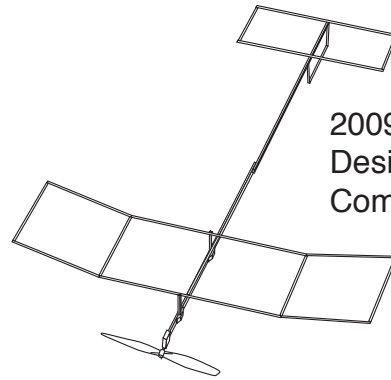

2009 Wright Stuff Airplane
Designed by: *Chuck Markos*
Computer Generated by: *John T. Wimmer*

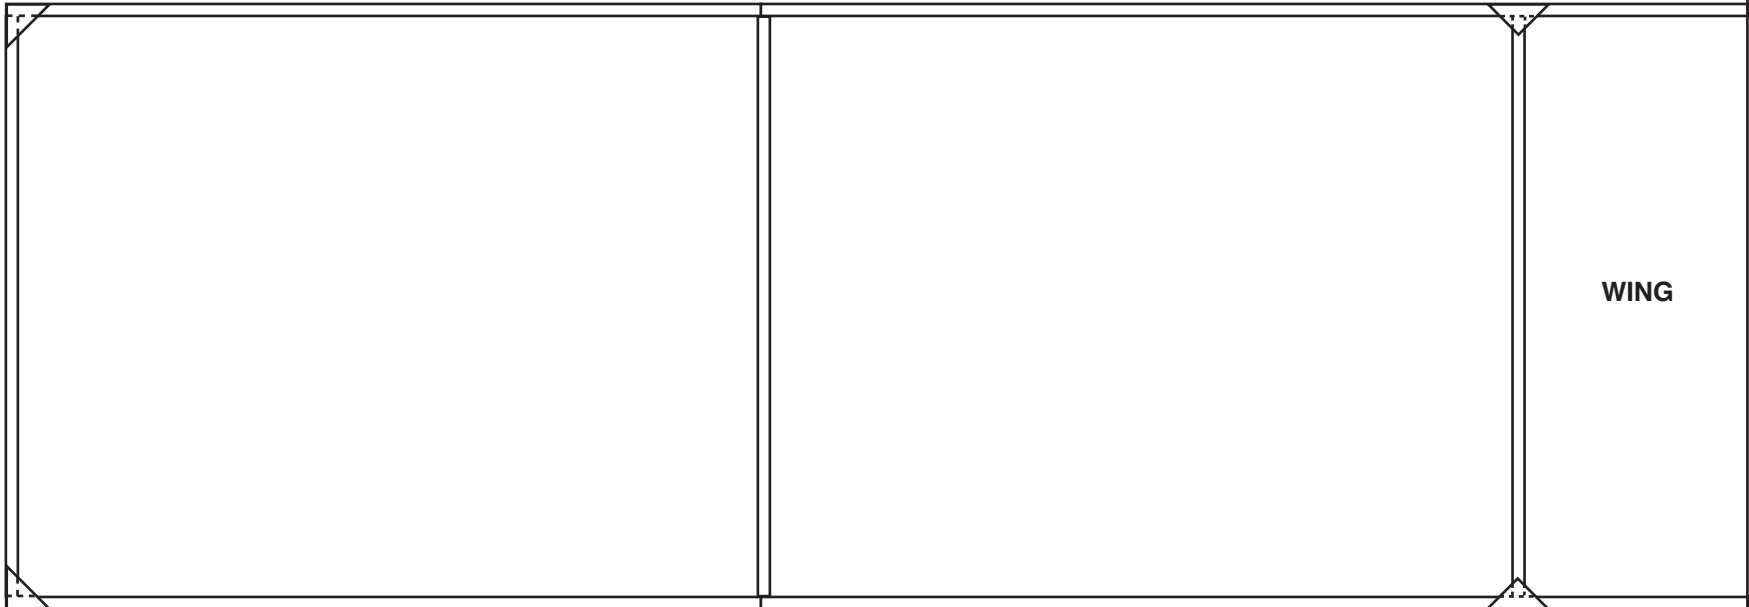
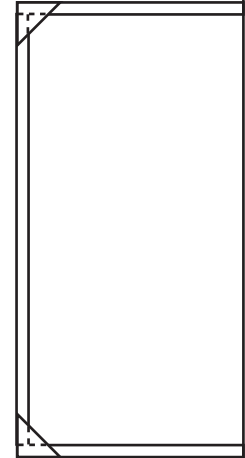


WING

TRIM OFF AND TAPE TOGETHER



Add paper gussets
to all corners and
center of wing spars.

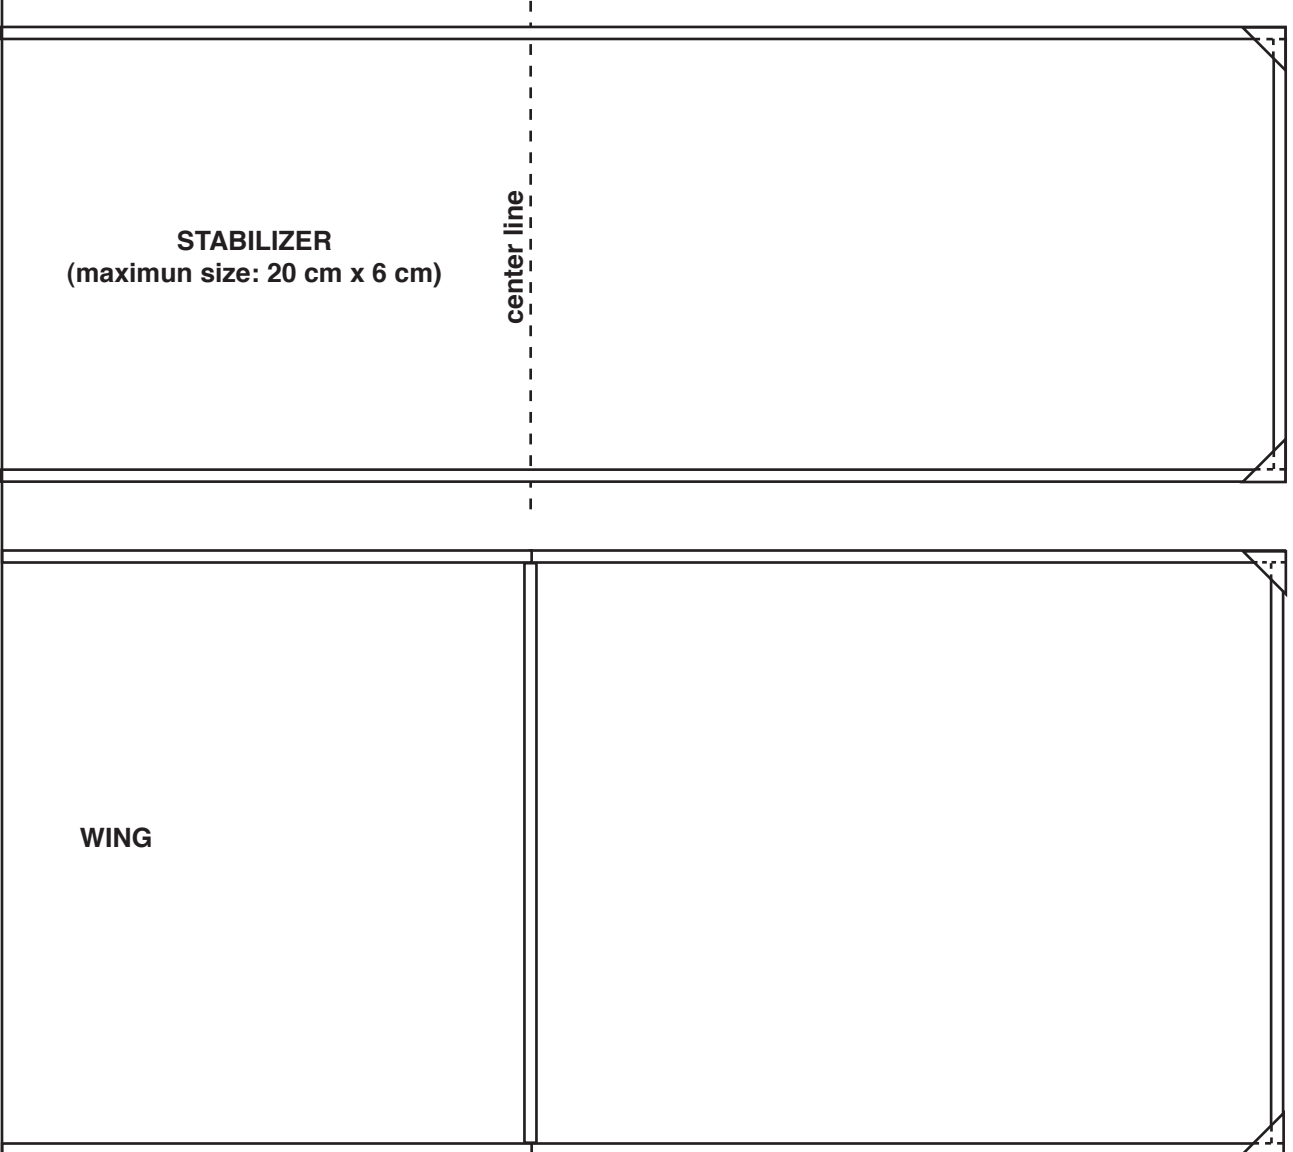

TRIM OFF AND TAPE TOGETHER

Dimensions shown on these plans when printed
may be different than those given on page 16 of the text.